

# 36” Tower Fan with Remote

## User Installation and Operations Manual

(Model: ANSIO 1035 | 1036)

### THANK YOU

We thank you for purchasing our product. We understand that this purchase represents your trust in us. We are grateful for this and assure you that we aspire to deliver the best value to you in return. We are proud of our creation and take every precaution to avoid problems. Despite this, sometimes a product might reach you with a defective appliance. If this happens, our responsive customer services team will be able to assist you towards a quick resolution. So, do not hesitate to contact us regarding any aspect of your purchase.

You can contact us by:

- Sending an email to [support@ansio.co.uk](mailto:support@ansio.co.uk)
- Calling us on **0800 080 6781 (Toll Free)** or **+44 207 157 9795**

### GUARANTEE

This product comes with a standard 1 Year warranty against all manufacturing defects. **In addition, register your purchase at [www.ansio.co.uk](http://www.ansio.co.uk) within 15 days, and you can get an additional one-year FREE Extended Warranty.** Terms and conditions apply. Visit our website for more info.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

You can always contact us when you need any assistance in returning the goods or any warranty related questions. This guarantee does not affect your statutory rights.

### CAUTION

Read Rules for Safe Operation, Installation Instructions and Operation carefully.

### WARNING

 
1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.

3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
5. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
6. Once the fan is assembled, the rotor blade guard shall not be taken off.
  - Prior cleaning, unplug the fan.
  - The rotor guard shall not be disassembled/opened to clean the rotor blades.
  - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

## RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. DO NOT place the fan in a window sill, rain may create electrical hazard.
5. This product is for household use only.


## INSTALLATION INSTRUCTIONS

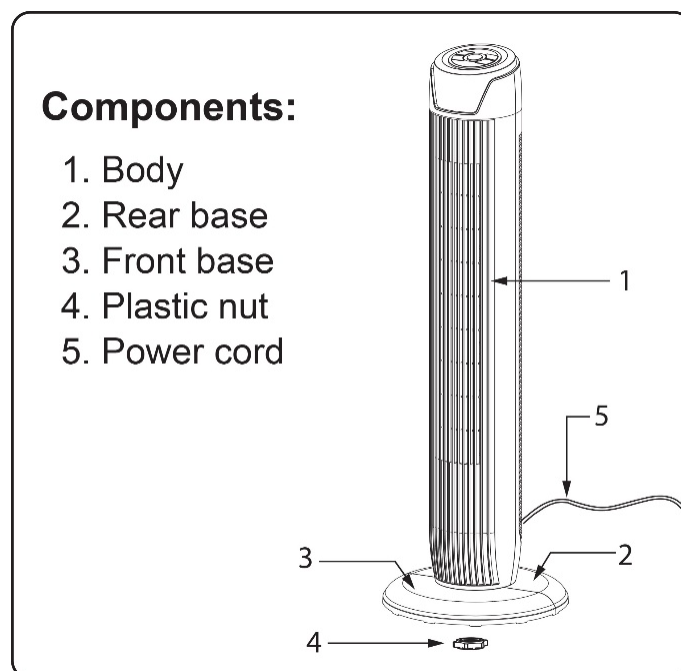

## BASE INSTALLATION

1. Take out the fan body and the spare parts from the box. Put the front base onto rear base and join them together. (See Fig. 1)
2. Unlock the plastic nut from the fan body.
3. Pass the power cord through the flute, then insert the fan body into the base. (See Fig.3)
4. Fix the fan body on the base with the plastic nut. (See Fig. 2)

 **IMPORTANT NOTE:** Make sure that the power cord is inserted into the flute properly and that the main fan body does NOT touch the power cord. Failing to do this might produce a creaky noise when the fan is functioning.

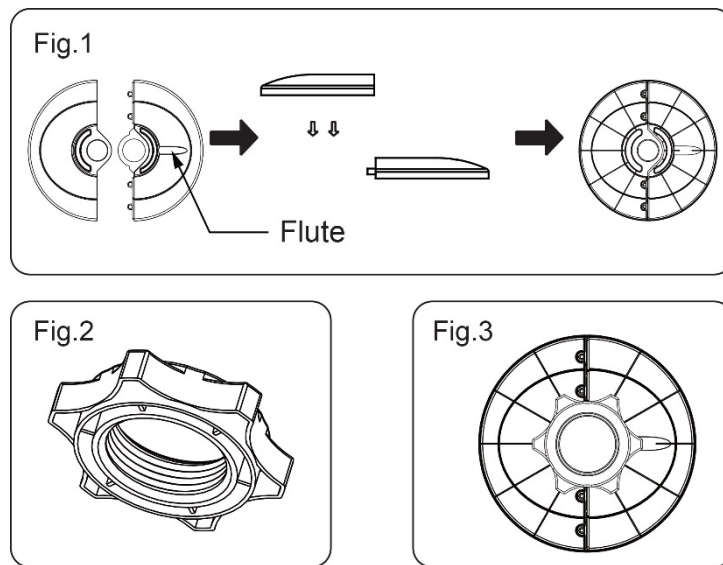


## OPERATION INSTRUCTIONS


### Remote Control Operation

#### a. REMOTE CONTROL BUTTONS (Fig.4)

##### 1. ON/OFF BUTTON

To turn the fan ON, press  button. Press the button again to turn the fan OFF.

##### 2. SPEED BUTTON

To change the speed of the fan, press the  button. Continue to press the button until you reach the desired speed.

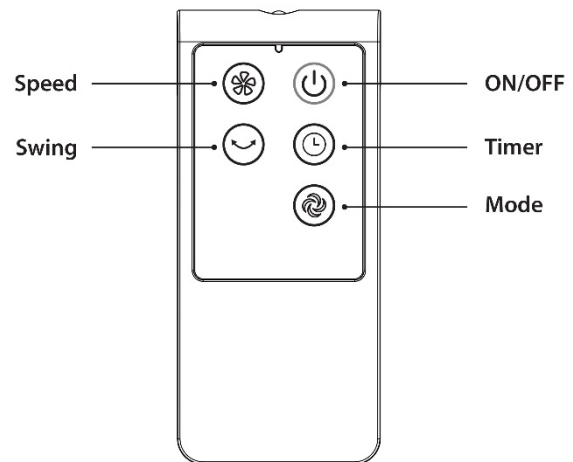 



Fig.4

### 3. **MODE BUTTON**

Press the  button until the desired mode is reached.






**Normal Mode** sets a constant air flow at the currently selected speed.




**Natural Mode** offers a unique natural breeze setting. Enjoy the breeze as the fan cycles randomly through all fan speed settings, simulating the natural breezes found outdoors.




**Taper Mode:** Under Taper mode there are three operational speeds available:



-  **Low speed:** The fan runs at Low Speed in the Normal Mode continuously.
-  **Middle speed:** The fan runs for 30 minutes at Medium Speed in the Normal Mode, then switches to run at Low Speed in the Normal Mode continuously.
-  **High speed:** The fan runs for 30 minutes at High Speed in the Normal Mode, then switches to run at Medium Speed for 30 minutes in the Normal Mode after which it switches to run at Low Speed in the Normal Mode continuously.

### 4. **OSCILLATION BUTTON**

For the fan to oscillate, press the Oscillation  button once. The fan will start oscillating.

To stop the oscillation, press the Oscillation  button again. The fan will stop oscillating.

 
### 5. **TIMER BUTTON**

- Press the TIMER button  to start the timer mode. It can count down from a minimum of one hour to a maximum of 7 hours after which the fan will turn off automatically. The timer can only be set in 1-hour intervals.
- Continue to press TIMER button  to the desired time. Once the timer counts down to zero, the fan will automatically turn off.

## b. BATTERIES FOR THE REMOTE CONTROL:



1. Remove the battery cover at the back of the remote control
2. Replace with 2 pieces of UM-4 AAA / R03 batteries as shown in Figure 5
3. Carefully reseal and close the battery cover.

**NOTE:** Use size “AAA” manganese or alkaline batteries. Do not use rechargeable batteries.

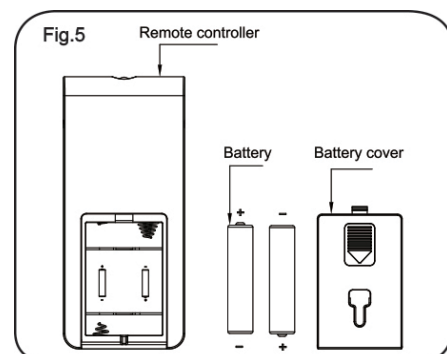

## c. NOTES ON BATTERIES:

  1. To prevent the risk of leakage or explosions, never apply heat, dismantle or attempt to recharge the batteries. When the unit is not going to be used for a long time period remove the remote control batteries to avoid battery leakage.

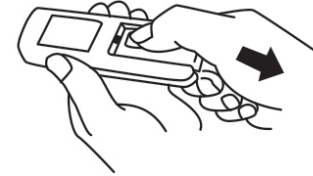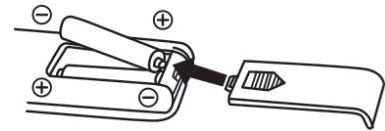






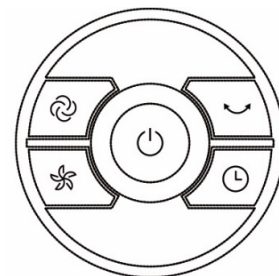 
2. If the battery has leaked, throw it away. Thoroughly clean the battery compartment using a dry cloth.
3. Do not dispose batteries in fire as they may leak or explode.
4. Do not mix old and new batteries.
5. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

## d. NOTES FOR REMOTE CONTROLLER OPERATION:

- The remote control will work at a distance of up to roughly 5 metres and at an angle of 30 degrees from the control panel.
- Avoid placing the fan in direct sunlight as this may affect the operation of the remote control.
- Remove the remote-control batteries before disposal of the product.

## BUTTONS ON THE FAN CONTROL PANEL

The buttons on the body such as ON/OFF , SPEED , MODE , TIMER , OSCILLATION  have the same functions as those of the corresponding keys on the remote controller.



## MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Wipe the exterior parts with a soft cloth soaked in a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
5. Do not use any of the following as a cleaner: gasoline, thinner, bending.
6. Do not allow water or any other liquid into the motor housing or interior parts.
7. When not in use, store the fan (preferably in its original box) in a cool, clean and dry location.

Customer Support - UK Toll Free **0800 080 6781** or **+44 207 157 9795**

## CLEANING

1. Make sure to unplug the fan from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moistened with mild soap. Thoroughly remove soap film with dry cloth.

## WASTE DISPOSAL

- This item must not be disposed of with the household waste.
- Please recycle where facilities exist. Check with your Local Authority for recycling advice. The crossed out wheeling bin symbol is to emphasize that when the item is disposed, it must be separately collected for recycling the materials they contain in the interest of environment and human health.
- By ensuring that you dispose of your old electrical and electronic equipment according to The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), you are helping to preserve our natural resources.



For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)

Environmental Agency Registration Number for ANSIO: WEE/MM6674AA

# ansio®

**Ansio Ltd.,  
PO Box 106, Banstead, SM7 9BU, UK.**

**support@ansio.co.uk  
www.ansio.co.uk**

**KEEP THIS INSTRUCTION MANUAL SAFELY, DO NOT THROW IT AWAY**

Customer Support - UK Toll Free **0800 080 6781** or **+44 207 157 9795**